




Sanyo VPC S1275 LCD Screen Replacement

Written By: Evan Perez

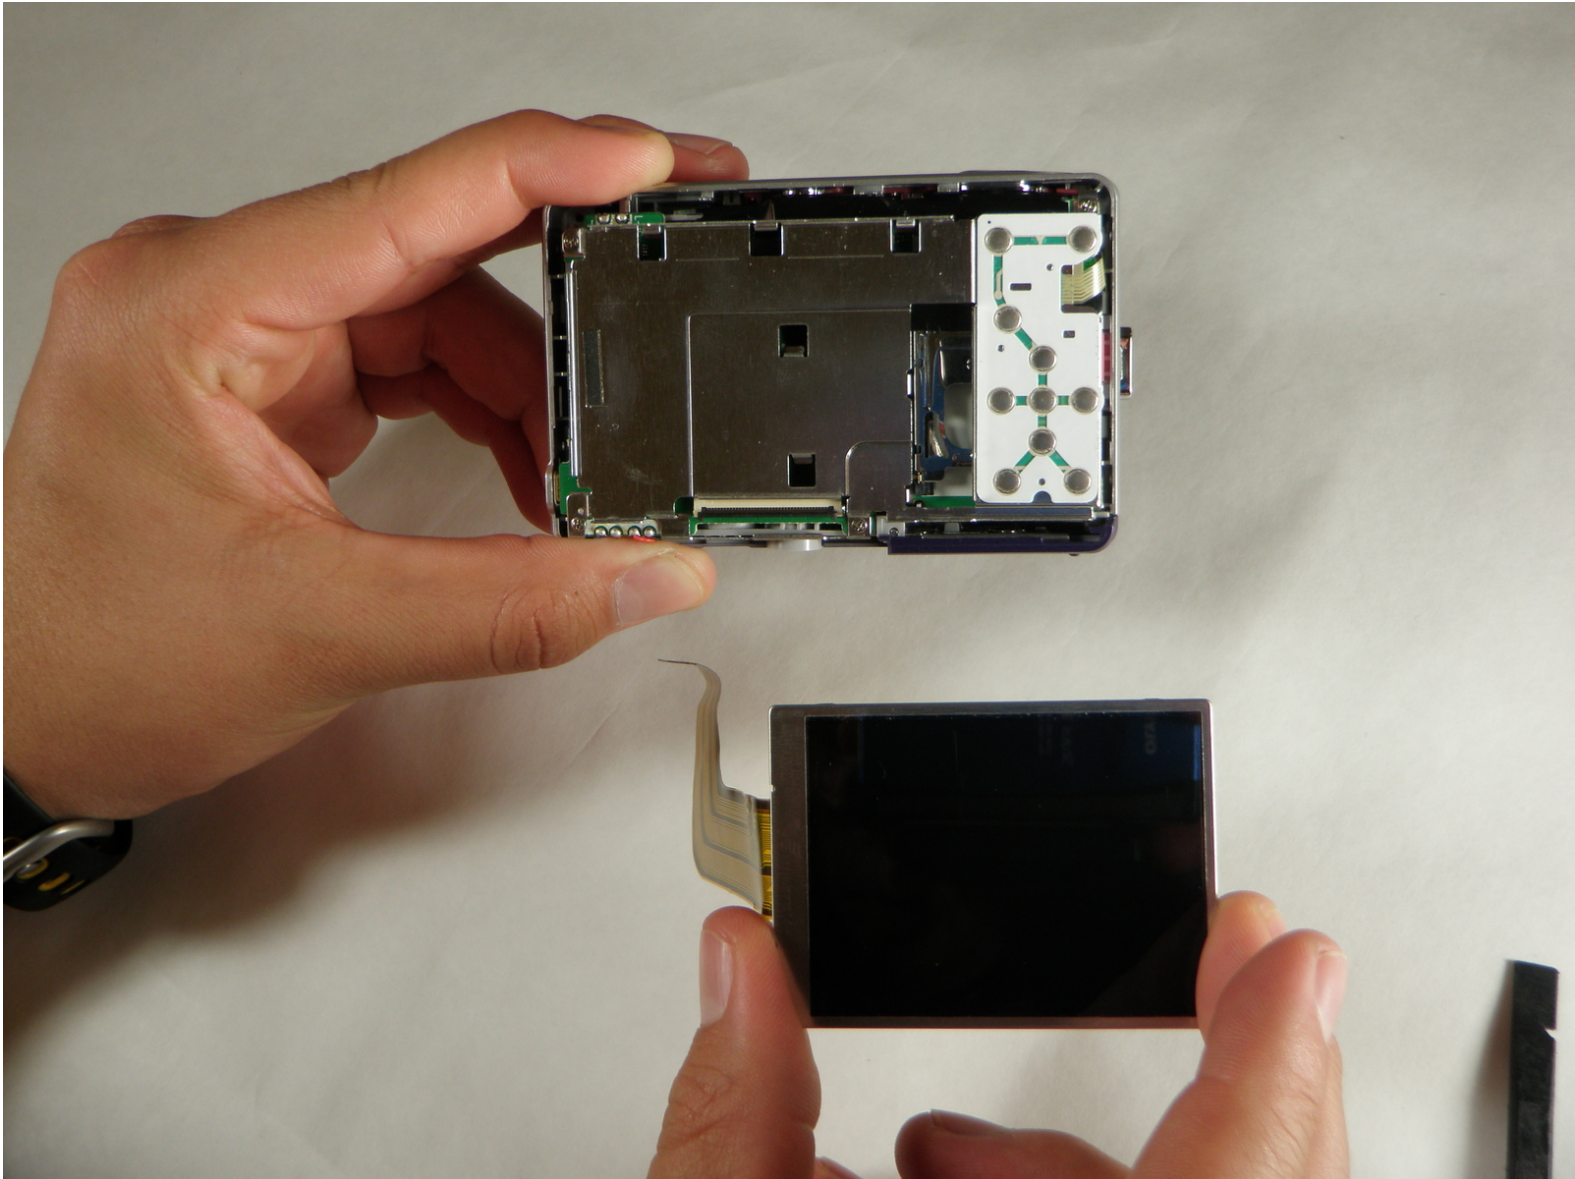


INTRODUCTION

Use this guide to gain entry to LCD screen and replace it if necessary.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

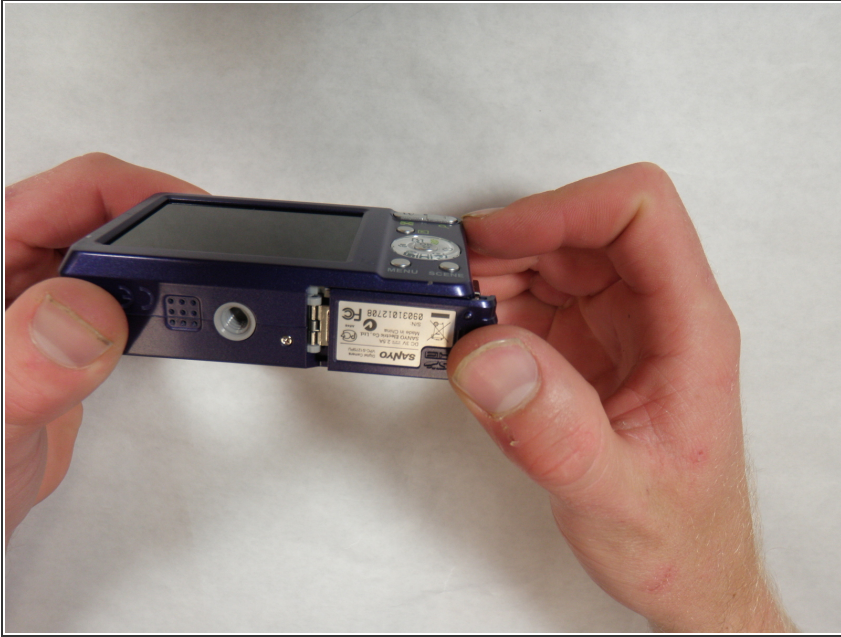

- Place your thumb on the right side of the camera over the battery door.
- Slide the battery door to the right until the door lifts up.

Step 2




- Remove and recycle old batteries.

Step 3 — Case



- Unscrew 6 Phillips screws using the #00 Phillips screwdriver.
 - Two screws are on the left side of the camera.
 - Two screws are on the right side of the camera.
 - Two screws are on the bottom of the camera.

Step 4

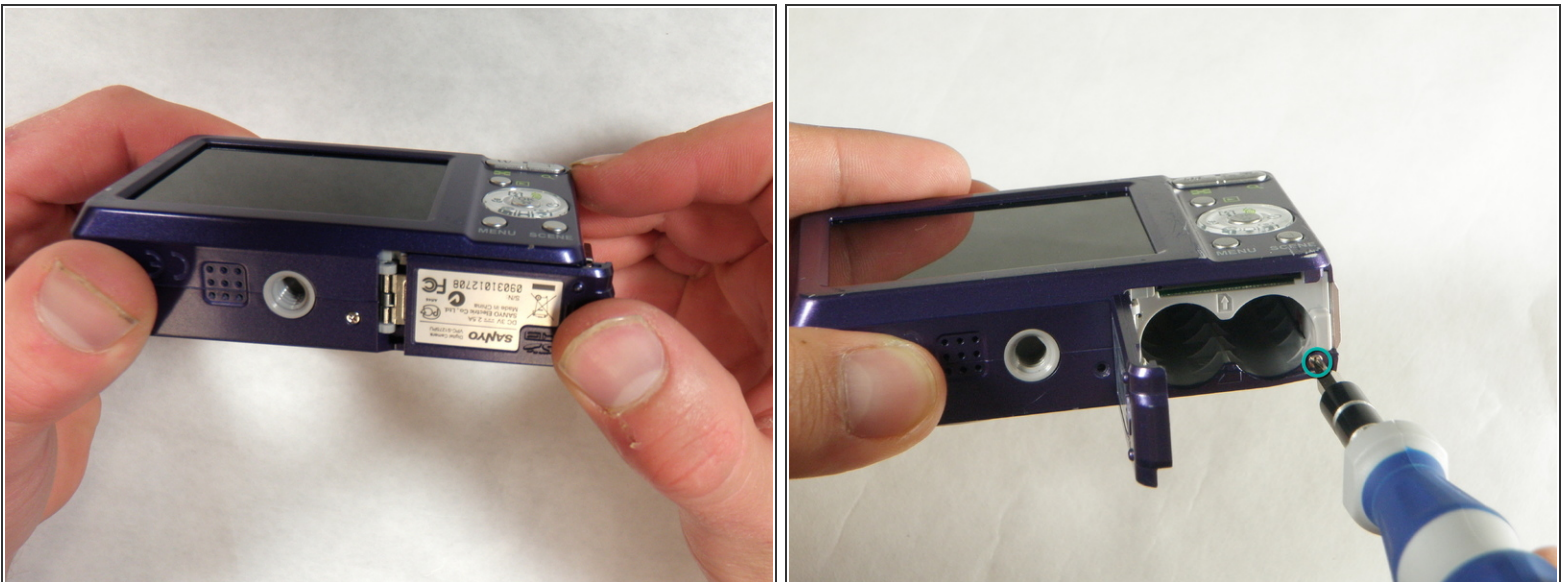


- Open battery slot on the bottom of the camera by sliding the door to the right.
- Remove the 4 mm phillips screw on the bottom right using the #00 phillips screwdriver.

Step 5




- Insert spudger in the seam at the bottom of the camera.
- Gently separate the rear case from the front of the camera.

Step 6

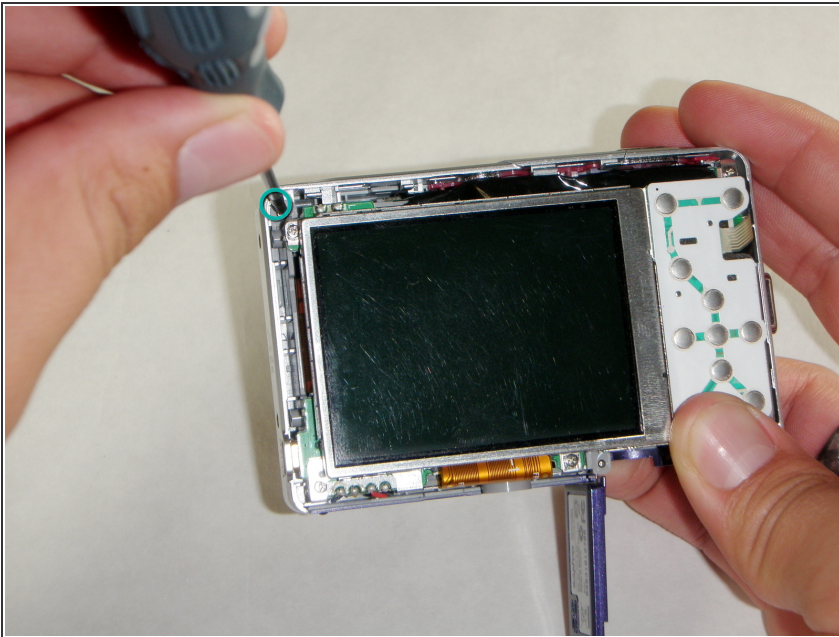

- ⓘ This step is only needed for the case and logic board replacement
- Using the #00 phillips screwdriver remove the screw attached to the front casing in the top left corner. Front case should easily separate.



Step 7

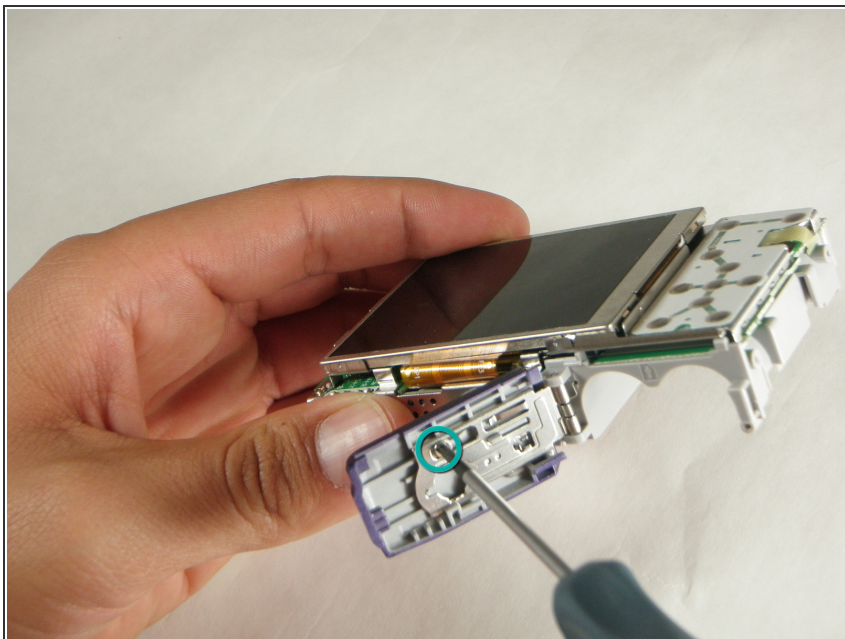

i This step is only needed for the case replacement.


- Using the #00 Phillips screwdriver remove the screw on the inside of the battery door.
- Slide the battery door off of the hinge.

Step 8 — LCD Screen

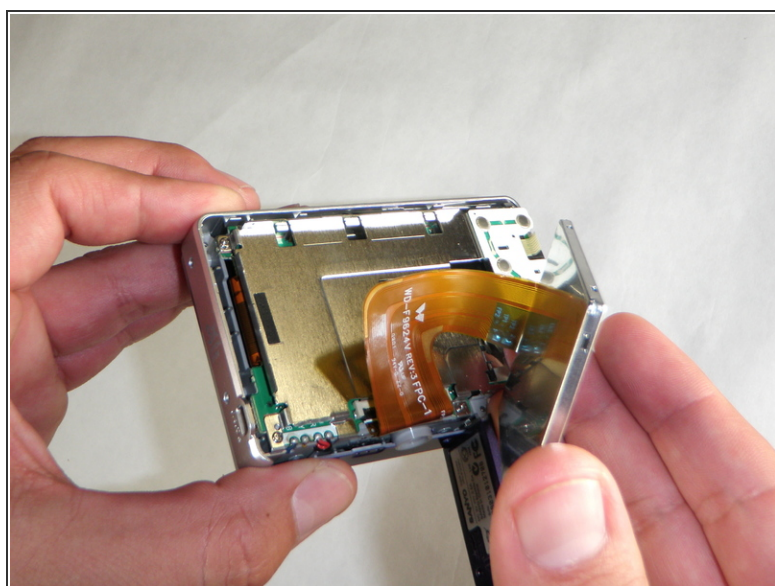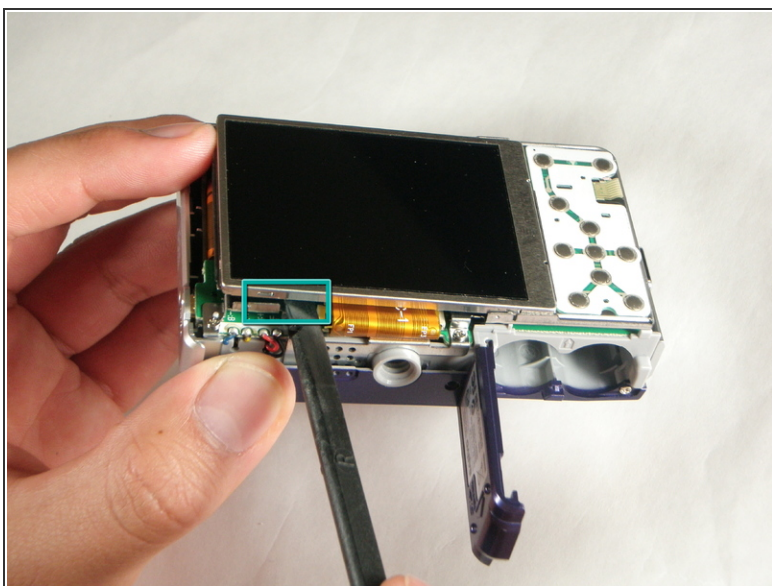

- Using the spudger gently lift up the LCD screen carefully to keep the ribbon intact.
- Place the LCD screen on a non-abrasive surface.

Step 9

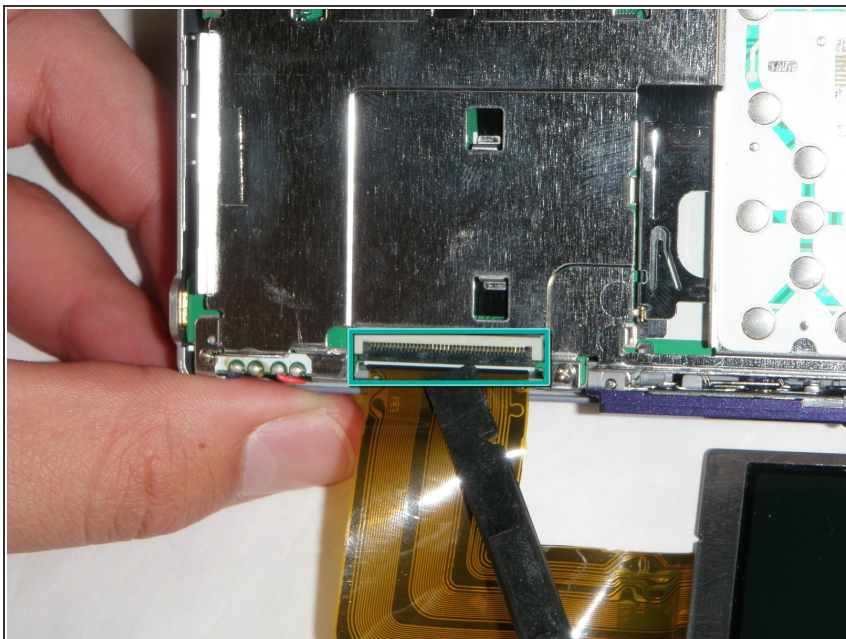

- Using the spudger lift the black flap up to release the ribbon.
- The LCD screen will now be completely detached from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 01:09:37 PM.